11-6625-2709-40P

TECHNICAL MANUAL

GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR

RADIO TEST SET AN/ARM-92B
(NSN 6625-00-631-5501)

HEADQUARTERS, DEPARTMENT OF THE ARMY
APRIL 1978

D 101.11:

READEX FICHE best copy available

TECHNICAL MANUAL
No. 11-6625-2709-40P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, *17 April 1978*

GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR

RADIO TEST SET AN/ARM-92B (NSN 6625-00-631-5501)

Current as of 16 November 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forwarded to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION I.	Introduction	1	
II.	Repair Parts List	5	
GROUP 00	Radio Test Set AN/ARM-92B	5	1
01	Test Set, Radio TS-2500B/ARM-92B	7	2
	0101 Case Assembly, Bottom	9	3
	0102 Electronic Component Assembly	15	4
	010201 Electronic Component Subassembly	19	5
	0103 Control, Radio Set C-6873/ARN-82 (See TM 11-5826-226-34P for parts.)	21	6
	0104 Compass Simulator Control DS4		
	0105 Course Indicator ID-250A/ARN (See TM 11-5826-211-50 for parts.)		
	0106 Indicator, Course ID-1374C/ARN-82A (See TM 11-5826-226-34P for parts.)	23	7
02	Test Set, Wiring Harness TS-2501/ARM-92	25	8
	0201 Panel Assembly	27	9
03	Cover, Test Set CW-878/ARM-92	29	10
04	Cable Assembly, Power CX-11568/ARM-92	31	11
05	Cable Assembly CX-13034	33	12
06	Cable Assembly CX-13055		
SECTION III.	Special Tools List (Not Applicable)	34	
IV.	National Stock Number and Part Number Index		

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/ARM-92B. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	*Definition*
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(*a*) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	*Application/Explanation*
O	Support item is removed, replaced, used at the organizational level.
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(*b*) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	*Application/Explanation*
Z	Nonreparable. No repair is authorized.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	*Definition*
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
D	Reparable item. When beyond repair capability, return to depot. Condemnation and disposal not authorized below depot level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

The following publications pertain to the AN/ARM-92B and its components:

TM 11-5826-211-50, Radio Magnetic Indicator ID-250A/ARN

TM 11-5826-226-20, Radio Receiving Sets AN/ARN-82 and AN/ARN-82A

TM 11-5826-226-34P, Receiving Sets, Radio AN/ARN-82 and AN/ARN-82A

TM 11-6625-2709-12, Radio Test Set AN/ARM-92B

TM 11-6625-2709-20P, Radio Test Set AN/ARM-92B

TM 11-6625-2709-40, Radio Test Set AN/ARM-92B

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third*. Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth*. Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First*. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second*. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4.)

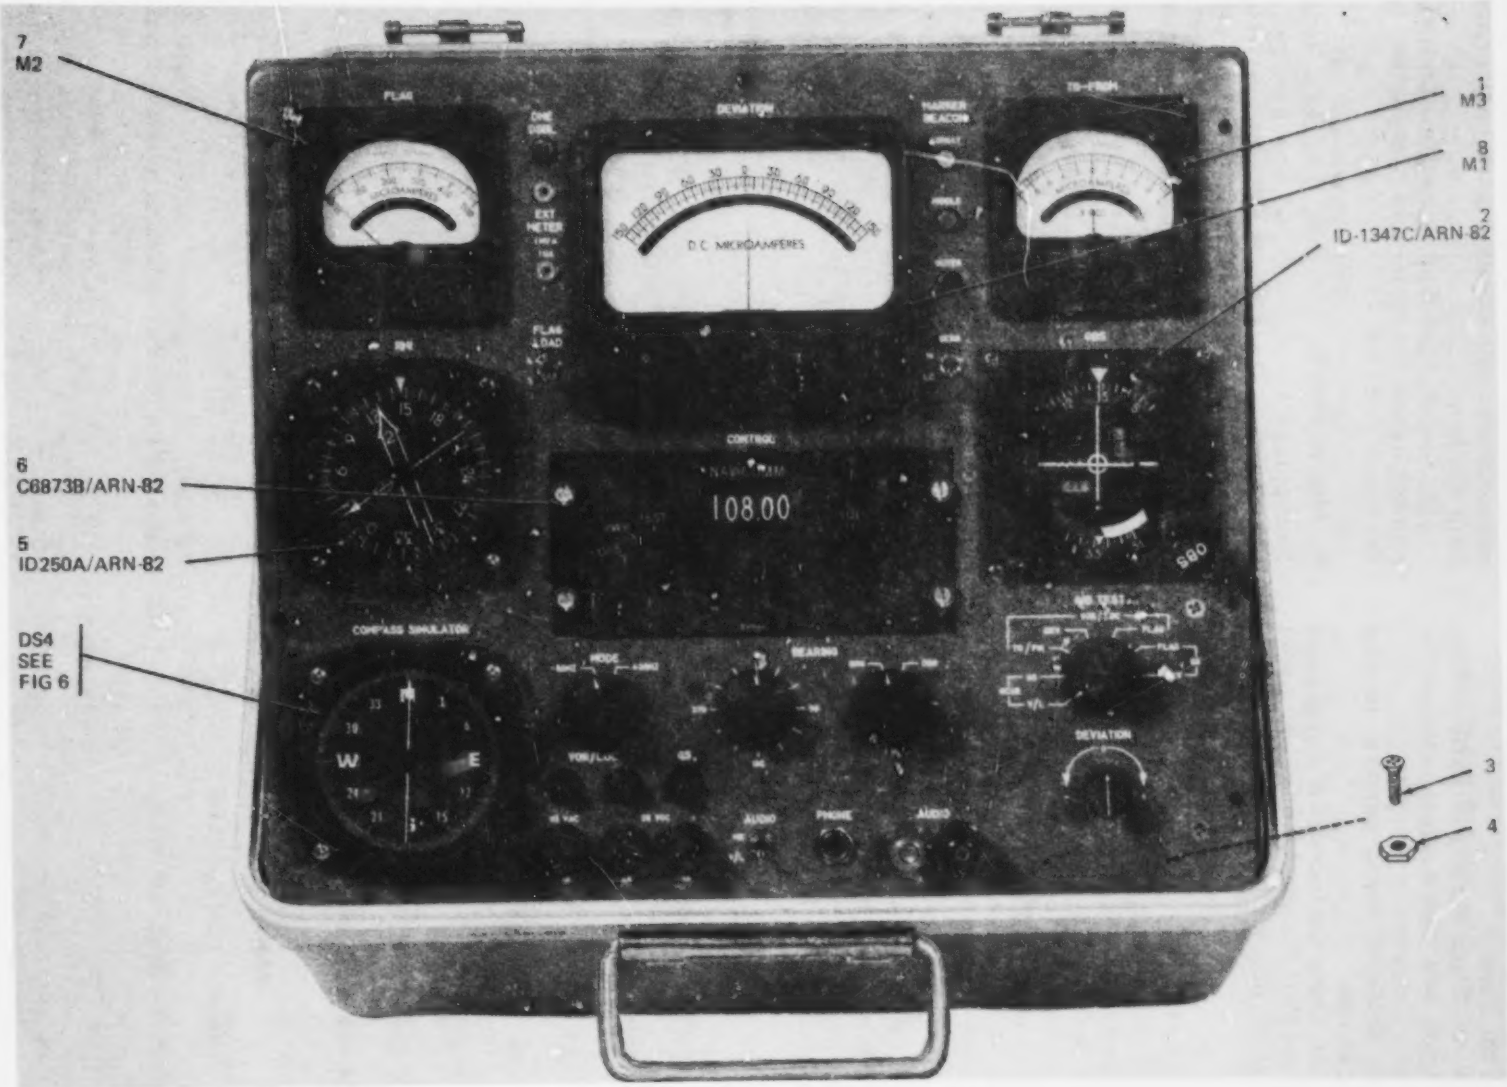

Figure 1. Radio Test Set AN/ARM-92B.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP-00 RADIO TEST SET AN/ARM-92B		
1	1	PAHZZ	6625-00-966-1932	8186	55026	TO-FROM METER	EA	1
1	2	PDHDD	5826-00-106-1722	ID1347C/ARN82	80058	INDICATOR,COURSE	EA	1
1	3	PAHZZ	5305-00-054-5638	MS51957-4	96906	SCREW,MACHINE	EA	2
1	4	PAHZZ	5310-00-622-1724	68-1660-26	72962	NUT,SELF-LOCKING	EA	2
1	5	PDHDD	5826-00-505-3094	ID250A/ARN	80058	COURSE INDICATOR RMI	EA	1
1	6	PDHDD	5826-00-149-1399	C6873B/ARN82	80058	CONTROL,RADIO SET	EA	1
1	7	PAHZZ	6625-00-966-1933	8185	55026	FLAG METER	EA	1
1	8	PAHZD	6625-00-842-9720	7213	55026	DEVIATION METER	EA	1

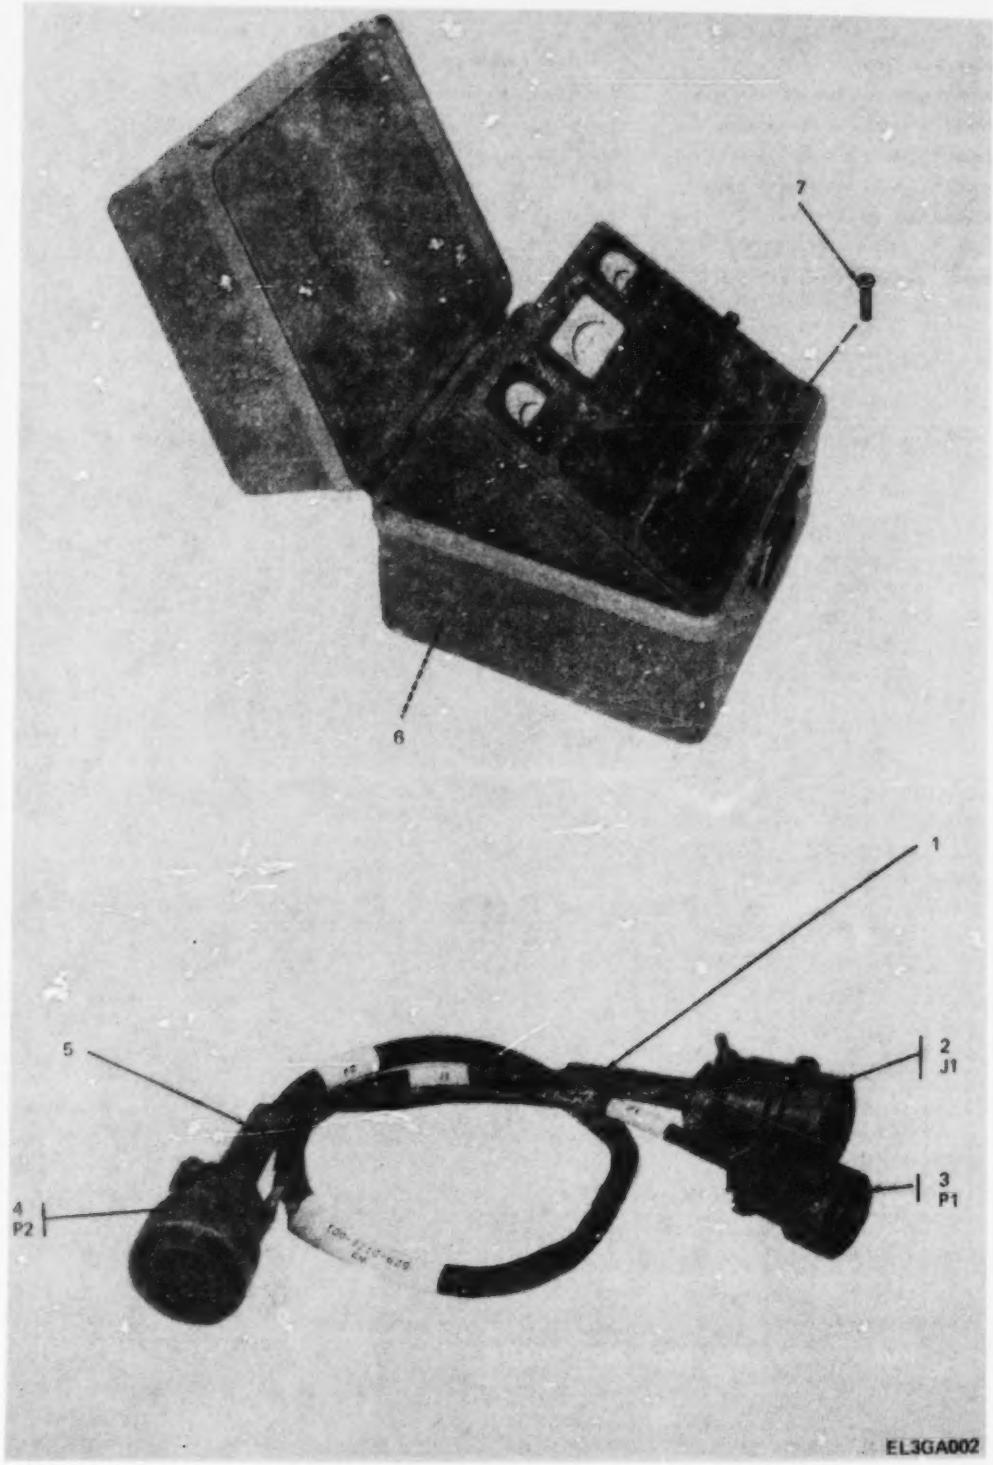

Figure 2. Test Set, Radio TS-2500B/ARM-92B.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 01 TEST SET,RADIO TS-2500B/ARM-92B		
2	1	PAHZZ	5365-00-820-4535	MS3420-6	96906	BUSHING,RUBBER	EA	3
2	2	XDHZZ		PT01E20-41PWSR	77820	CONNECTOR,PLUG	EA	1
2	3	XDHZZ		6T06AC14-19S	09922	CONNECTOR,PLUG	EA	1
2	4	XDHZZ	5935-00-806-2255	PT06A20-41SR	77820	CONNECTOR,PLUG	EA	1
2	5	PAHZZ	5935-00-936-7377	MS3420-8	96906	BUSHING,ELECTRICAL	EA	1
2	6	PAHZZ	5325-00-074-3301	MS21266-2N	96906	GROMMET,PLASTIC	EA	2
2	7	PAHZZ	5305-00-054-5635	MS51957-1	96906	SCREW,MACHINE	EA	2

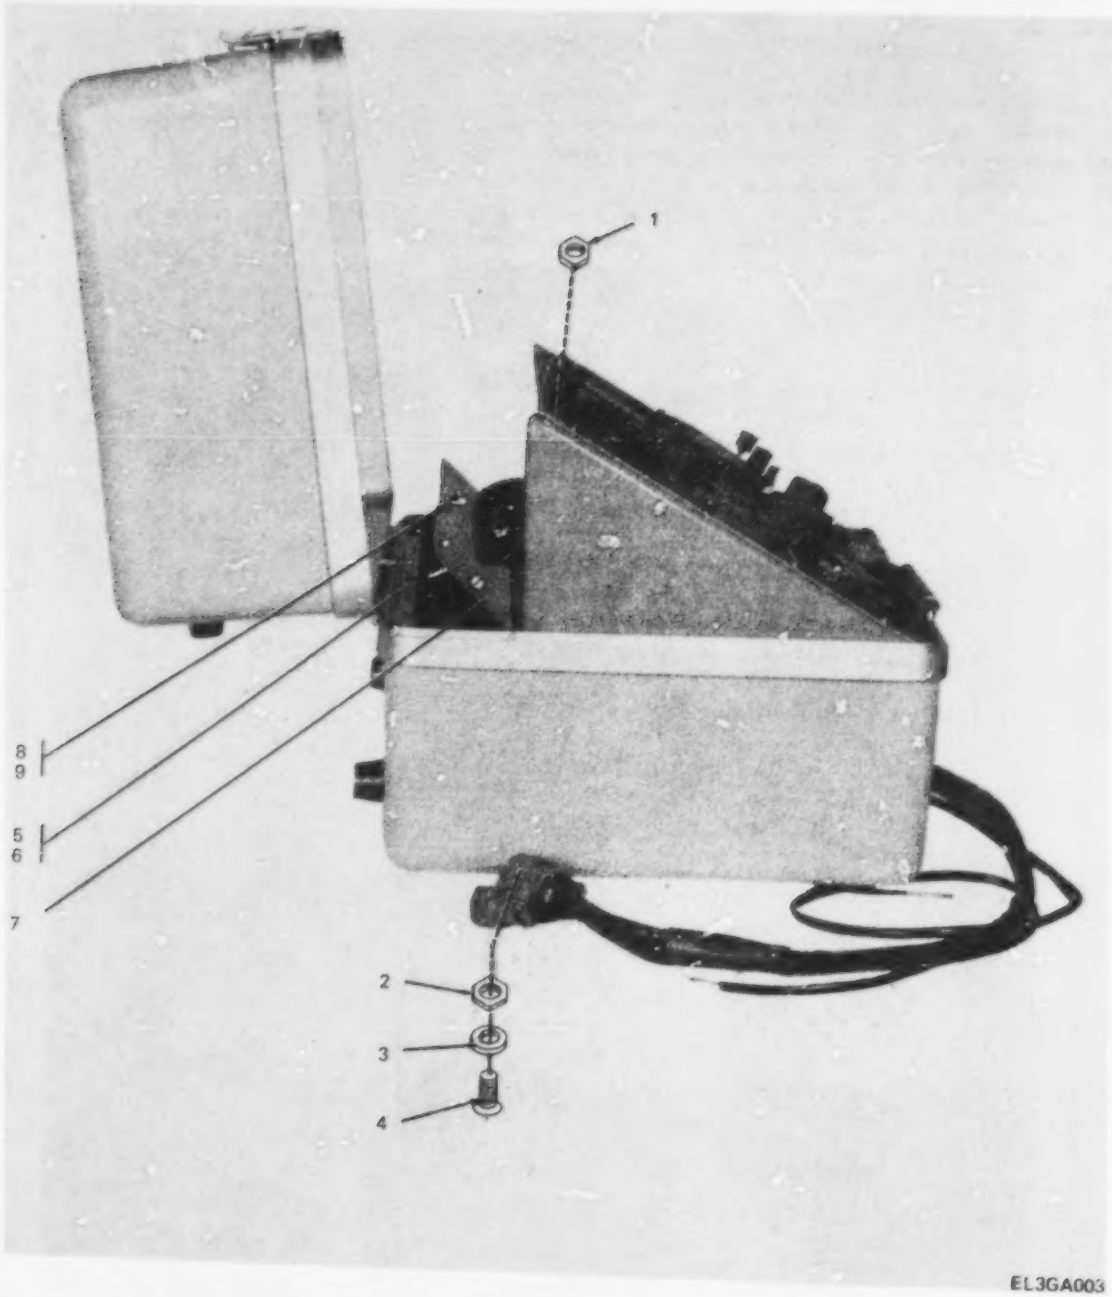

Figure 3. Case assembly, bottom.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION (INDENTURE CODE)	(7) U/M	(8) QTY INC IN UNIT
						GROUP 0101 CASE ASSEMBLY,BOTTOM		
5	1	PAHZZ	5310-00-275-1695	F1ZNC4284-2-62	72962	NUT,SELF-LOCKING	EA	7
5	2	XDHZZ		68NM62	72962	NUT,SELF-LOCKING	EA	36
5	3	PAHZZ	5310-00-581-9514	310-0360-000	79807	WASHER,FLAT	EA	4
5	4	PAHZZ	5305-00-054-6653	MS51957-29	96906	SCREW,MACHINE	EA	14
5	5	PAHZZ	5325-00-171-4365	212-12N	71286	RECEPTACLE	EA	1
5	6	PAHZZ	5320-00-584-0672	MS20426AD3-6	96906	RIVET,SOLID	EA	2
5	7	XAHZZ		629-0182-001	13499	COVER,STOWAGE	EA	1
5	8	PAHZZ	5310-00-337-8329	20008W	71286	PUSH ON NUT	EA	5
5	9	XDHZZ		2651387	71286	STUD ASSEMBY,TURN LOCK FASTENR	EA	5

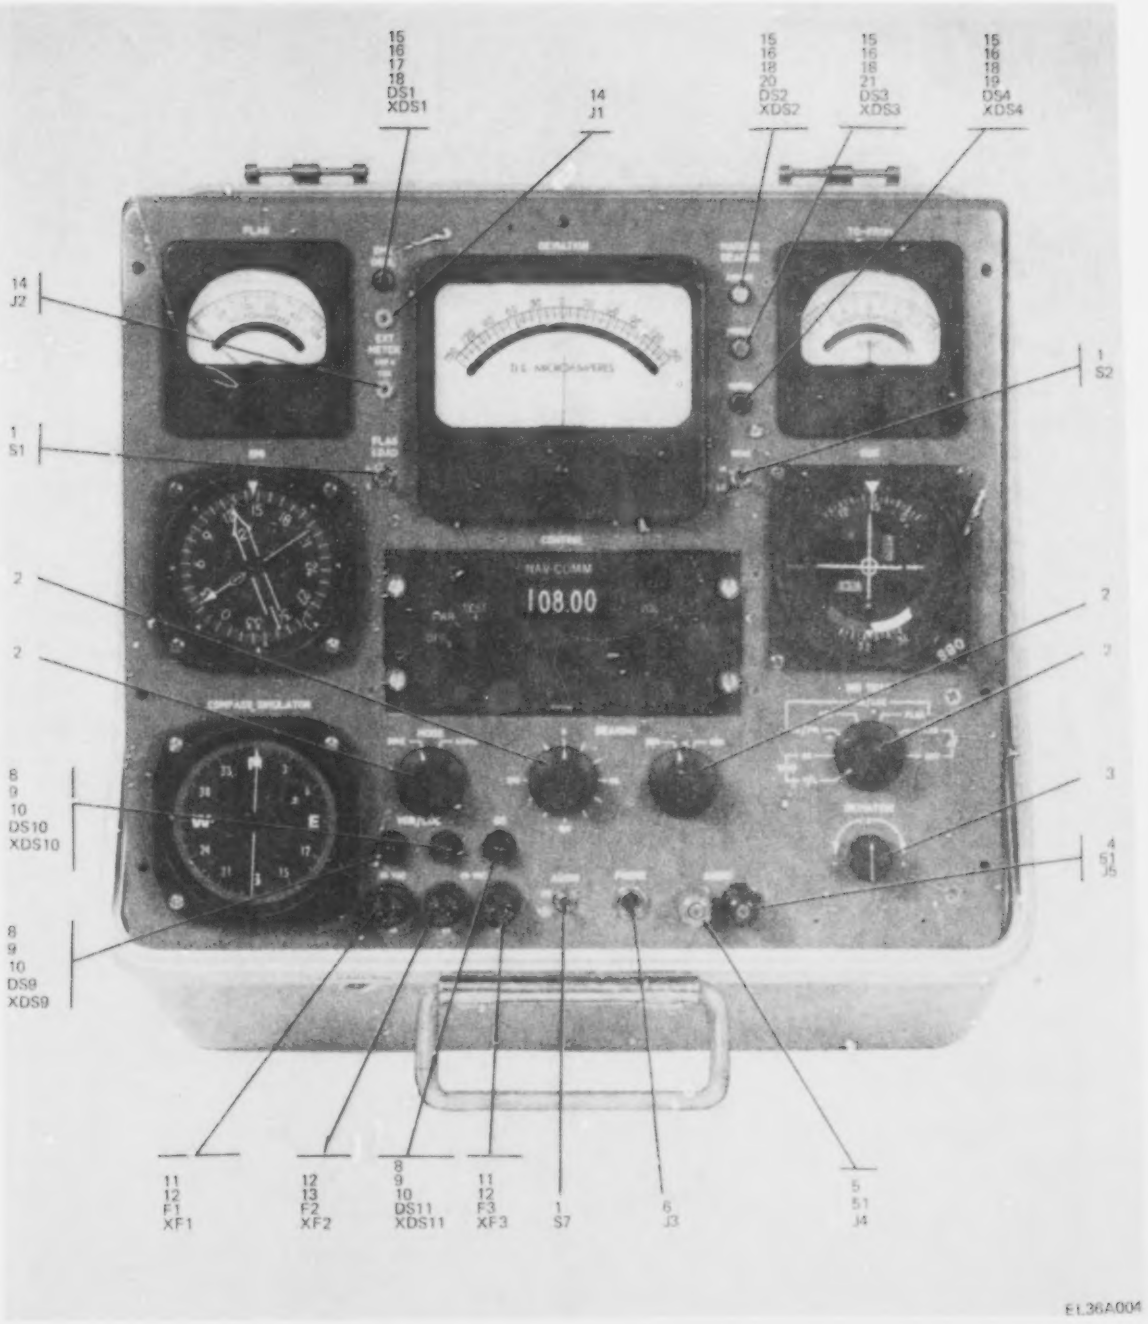

Figure 4 ②. Electronic component assembly (sheet 1 of 4).

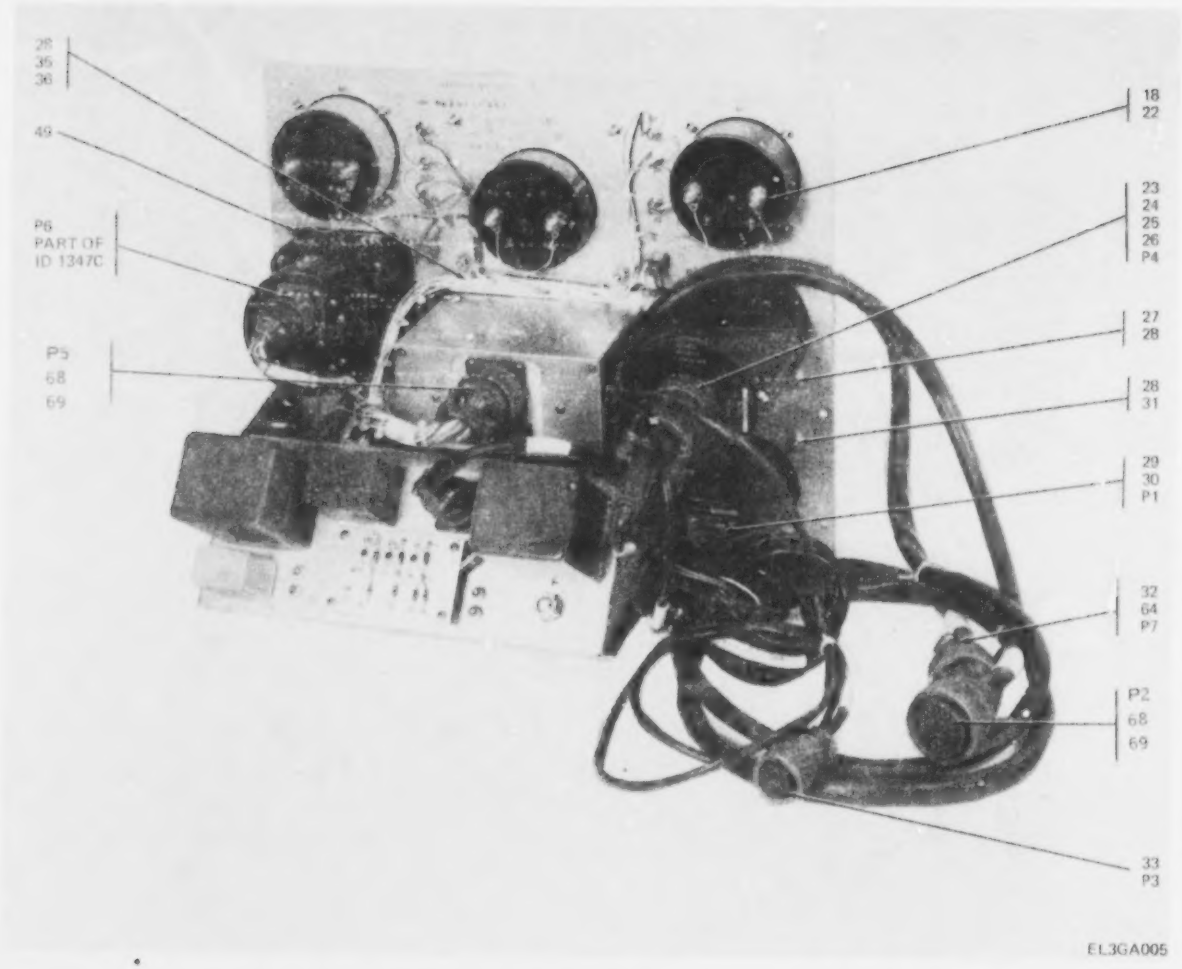

Figure 4-2. Electronic component assembly (sheet 2 of 4).

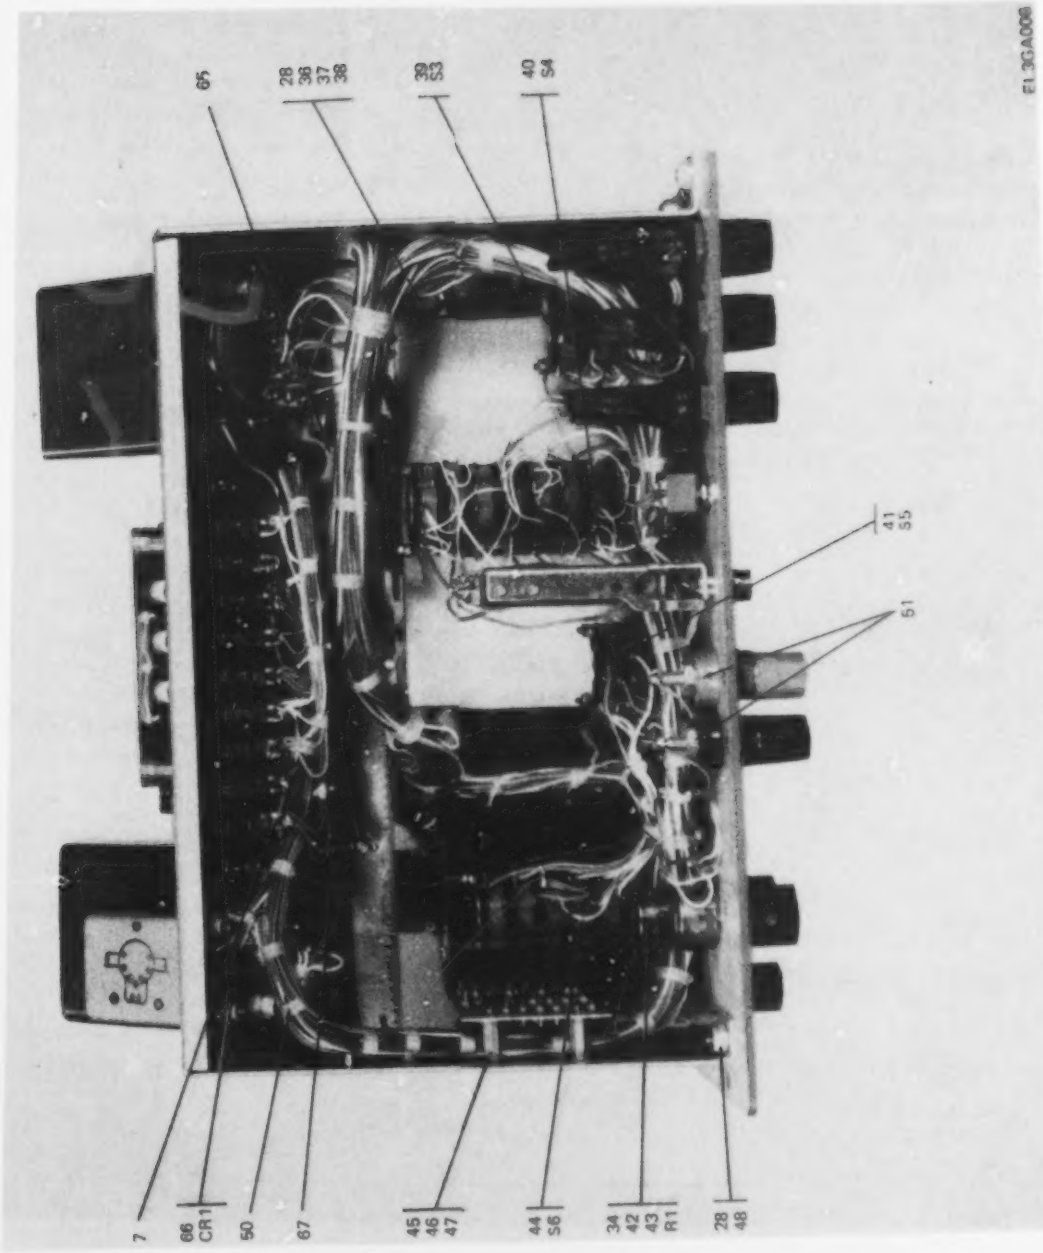

Figure 4-3. Electronic component assembly (sheet 1 of 3).

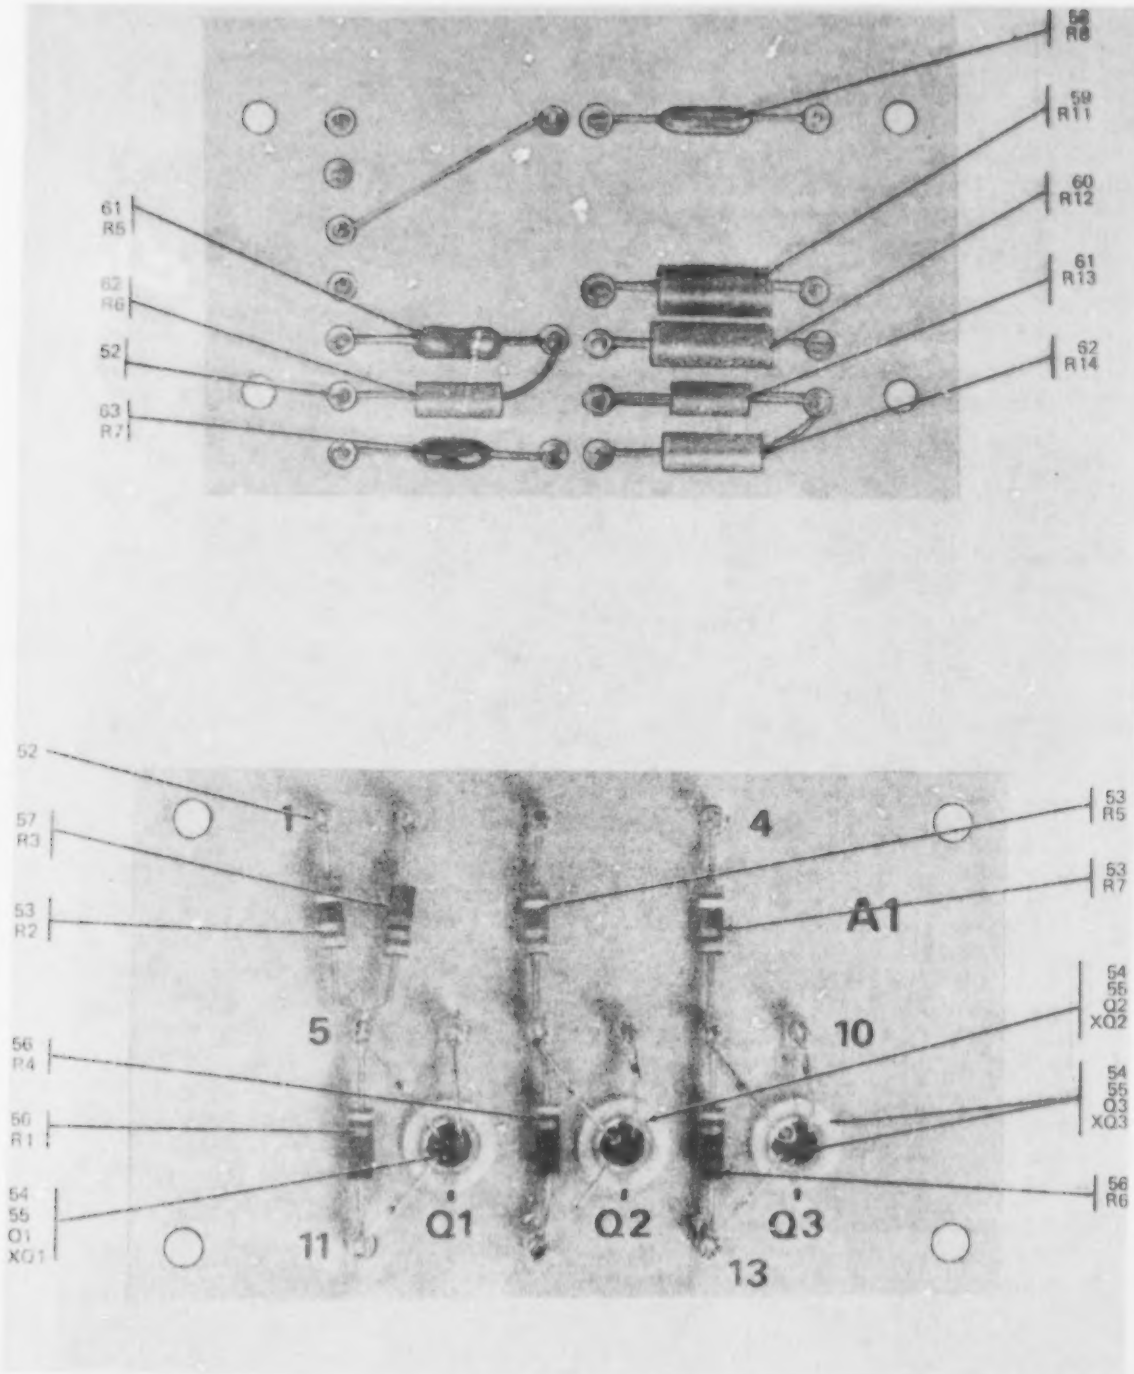

Figure 4-8. [illegible] component assembly (sheet 4 of 4).

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION (USABLE ON CODE)	(7) U/M	(8) QTY INC IN UNIT
						GROUP 0102 ELECTRONIC COMPONENT ASSEMBLY		
4	1	XDHZZ	5930-00-083-6820	7201SY20	09353	SWITCH,TOGGLE	EA	5
4	2	PADZZ	5355-00-680-1351	MS91528-1F28	96906	KNOB	EA	4
4	3	PADZZ	5355-00-909-0465	757-0226-001	13499	KNOB	EA	1
4	4	PAHZZ	5940-00-269-2219	DF308C	58474	POST,BINDING	EA	1
4	5	PAHZZ	5940-00-356-2493	DF30AC	58474	POST,BINDING	EA	1
4	6	PAHZZ	5935-00-415-6070	4-03649-0210	70674	JACK,TELEPHONE	EA	1
4	7	PAHZZ	5940-00-615-8958	2104-06-02-2520N	78189	TERMINAL,LUG	EA	4
4	8	PADZZ	6240-00-783-7744	MS25237-387	96906	LAMP,INCANDESCENT	EA	3
4	9	PADZZ	6210-00-990-4637	162-0931	72619	LENS,LIGHT	EA	3
4	10	XDHZZ		MILL3661-SLM731	81349	SOCKET,LIGHT	EA	3
4	11	PADZZ	5920-00-280-8342	AGC250-1	71400	FUSE,CARTRIDGE	EA	2
4	12	PAHZZ	5920-00-864-6622	HKPH	71400	FUSEHOLDER	EA	3
4	13	PADZZ	5920-00-280-5062	AGC250-2	71400	FUSE,CARTRIDGE	EA	1
4	14	PAHZZ	5935-00-813-5874	M39024-40-06	81349	JACK,TIP	EA	2
4	15	PADZZ	6240-00-143-6558	MS3338-6839	96906	LAMP,INCANDESCENT	EA	4
4	16	PAHZZ	6210-00-560-1558	102SR1H23M1	08717	SOCKET,LIGHT	EA	4
4	17	XDDZZ		102264RL	08717	LENS,INDICATOR	EA	1
4	18	PAHZZ	5310-00-543-2740	MS35333-74	96906	WASHER,LOCK	EA	10
4	19	XDDZZ		102264BL	08717	LENS,INDICATOR	EA	1
4	20	XDDZZ		102264WL	08717	LENS,INDICATOR	EA	1
4	21	PADZZ	6210-00-780-7944	102264AL	08717	LENS,INDICATOR	EA	1
4	22	PAHZZ	5940-00-665-5592	4012HT	77147	TERMINAL,LUG	EA	6
4	23	XDHZZ	5935-00-552-2374	MS3106A22-14S	96906	CONNECTOR,PLUG,STRAIGHT	EA	1
4	24	PAHZZ	5935-00-223-0572	MS3057-12A	96906	ADAPTER,CABLE	EA	1
4	25	PAHZZ	5365-00-598-5282	MS3420-4	96906	BUSHING,RUBBER	EA	2
4	26	PAHZZ	5935-00-936-7376	MS3420-10	96906	BUSHING,ELECTRICAL	EA	1
4	27	PAHZZ	5305-00-054-6656	MS51957-32	96906	SCREW,MACHINE	EA	4
4	28	XDHZZ	5310-00-857-5548	68NM40	72962	NUT,SELF-LOCKING	EA	15
4	29	XDHZZ	5935-00-539-2659	MS3106A14S5S	96906	CONNECTOR,PLUG	EA	1
4	30	PAHZZ	5935-00-280-2195	MS3057-6A	96906	CLAMP,CABLE	EA	1
4	31	PAHZZ	5305-00-054-6557	MS51957-33	96906	SCREW,MACHINE	EA	3
4	32	XDHZZ	5935-00-901-8874	PT06A20-41SWSR	77820	CONNECTOR,PLUG	EA	1
4	33	XDHZZ	5935-00-729-8688	PT06A12-10SSR	77820	CONNECTOR,PLUG	EA	1
4	34	PAHZZ	5310-00-263-8462	P313-0064-000	77250	NUT,PLAIN,HEXAGON	EA	1
4	35	XDHZZ	5340-00-003-9207	MP4N	09922	CLAMP	EA	2
4	36	XDHZZ	5310-00-515-8243	310-0040-000	79807	WASHER,FLAT	EA	3
4	37	PAHZZ	5340-00-336-8164	MP10N	09922	CLAMP,LOOP	EA	1
4	38	XDHZZ	5305-00-054-6652	MS51957-28	96906	SCREW,MACHINE	EA	1
4	39	XDHZZ		44A30-03-4-2N	81073	SWITCH,ROTARY	EA	1

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION / USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
4	40	XDHZZ		44030-08-1AJN	81073	SWITCH,ROTARY	EA	1
4	41	XDHZZ	5930-00-239-3258	44830-02-4-2N	81073	SWITCH,ROTARY	EA	1
4	42	XDHZZ		BK93369	11236	RESISTOR,VARIABLE	EA	1
4	43	PAHZZ	5310-00-261-7717	1720-02	78189	WASHER LOCK	EA	2
4	44	XDHZZ		42036-06-1AJN	81073	SWITCH,ROTARY	EA	1
4	45	XDHZZ	5310-00-053-1551	540-9041-003	13499	NUT,PLAIN	EA	8
4	46	PAHZZ	5305-00-054-5648	MS51957-14	96906	SCREW,MACHINE	EA	12
4	47	PAHZZ	5310-00-933-8118	MS35338-135	96906	WASHER,LOCK	EA	12
4	48	PAHZZ	5305-00-727-8832	MS51959-29	96906	SCREW,MACHINE	EA	5
4	49	XDHZZ	5305-00-054-6655	MS51957-31	96906	SCREW,MACHINE	EA	6
4	50	XDHZZ	5975-00-727-5153	MS3367-4-9	96906	STRAP,TIEDOWN	EA	100
4	51	PAHZZ	5310-00-261-8278	MS35338-100	96906	WASHER,LOCK	EA	2
4	52	XDHZZ	5940-00-950-5761	SL354-351#HT	12615	TERMINAL,FEEDTHRCUGH	EA	41
4	53	XDHZZ	5905-00-141-0743	RCR07G392KS	81349	RESISTOR,FIXED	EA	3
4	54	XDHZZ		618-4921-027	13499	TRANSISTOR,MODIFIED (SELECT AT TEST)	EA	3
4	54	XDHZZ	5961-00-490-7299	2N2222A	07263	TRANSISTOR (SELECT AT TEST)	EA	3
4	55	PAHZZ	5961-00-732-5028	119-0507-000009	98291	HOLDER,TRANSISTOR	EA	3
4	56	XDHZZ	5905-00-105-7764	RCR07G222JS	81349	RESISTOR,FIXED	EA	3
4	57	XDHZZ	5905-00-221-1312	RCR07G223KS	81349	RESISTOR,FIXED	EA	1
4	58	XDHZZ		RN55D2000B	81349	RESISTOR,FIXED	EA	1
4	59	XDHZZ	5905-00-669-0897	RN60D3740F	81349	RESISTOR,FIXED	EA	1
4	60	XDHZZ	5905-00-988-2313	RN60D1211F	81349	RESISTOR,FIXED	EA	1
4	61	XDHZZ	5905-00-965-5561	RN55D1102F	81349	RESISTOR,FIXED	EA	2
4	62	XDHZZ		RN55D2711B	81349	RESISTOR,FIXED	EA	2
4	63	XDHZZ	5905-00-952-7223	RN55D1782F	81349	RESISTOR,FIXED	EA	1
4	64	PAHZA	5999-00-965-5571	YE1620F29	09922	CONTACT,ELECTRICAL	EA	8
4	65	PAHZZ	5340-00-007-6640	HP5N	09922	CLAMP,LOOP	EA	1
4	66	XDHZZ		1N645	15238	SEMICONDUCTOR DEVICE DIODE	EA	1
4	67	PAHZZ	5940-00-738-1265	547-5305-002	13499	TERMINAL,LUG	EA	1
4	68	XDHZZ	5935-00-866-2255	PT06A20-41SSR	77820	CONNECTOR, PLUG	EA	2
4	69	PAHZZ	5935-00-936-7377	MS3420-8	96906	BUSHING, ELECTRICAL	EA	2

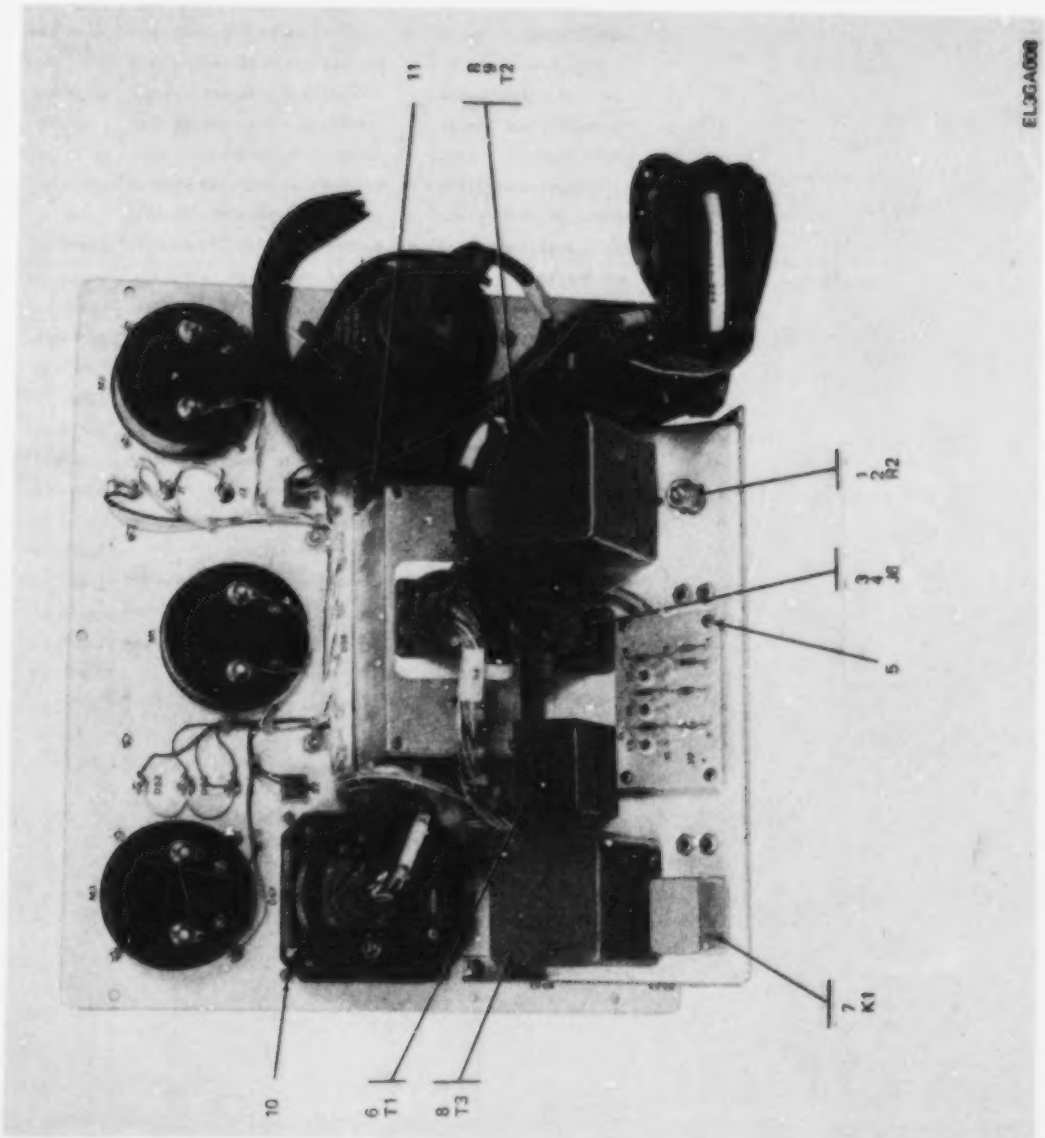

Figure 5. Electronic component subassembly.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION (USABLE ON CODE)	(7) U/M	(8) QTY INC IN UNIT
						GROUP 010201 ELECTRONIC COMPONENT SUBASSEMBLY		
5	1	XDHZZ	5905-00-681-1197	RAZULA5810ZA	81349	RESISTOR,VARIABLE	EA	1
5	2	XDHZZ		P313-0062-000	77250	NUT,PLAIN	EA	1
5	3	XDHZZ		MS3102A14S5P	96906	CONNECTOR,RECEPTACLE	EA	1
5	4	PAHZZ	5305-00-054-5649	MS51957-15	96906	SCREW,MACHINE	EA	4
5	5	PAHZZ	5305-00-770-2533	MS51959-13	96906	SCREW,MACHINE	EA	4
5	6	XDHZZ	5950-00-903-4357	HS480	80223	TRANSFORMER,POWER,FIXED	EA	1
5	7	XDHZZ	5945-00-530-7924	5437-6MS	82419	RELAY,ARMATURE	EA	1
5	8	XDHZZ	5950-00-736-9446	36747	73386	TRANSFORMER,AUDIO	EA	2
5	9	XDHZZ		310-0447-000	79807	WASHER,FLAT	EA	1
5	10	PAHZZ	5310-00-866-3506	FIZNCFWAZ-62	72962	NUT,SELF-LOCKING	EA	4
5	11	PAHZZ	5305-00-768-0336	MS51959-17	96906	SCREW,MACHINE	EA	4

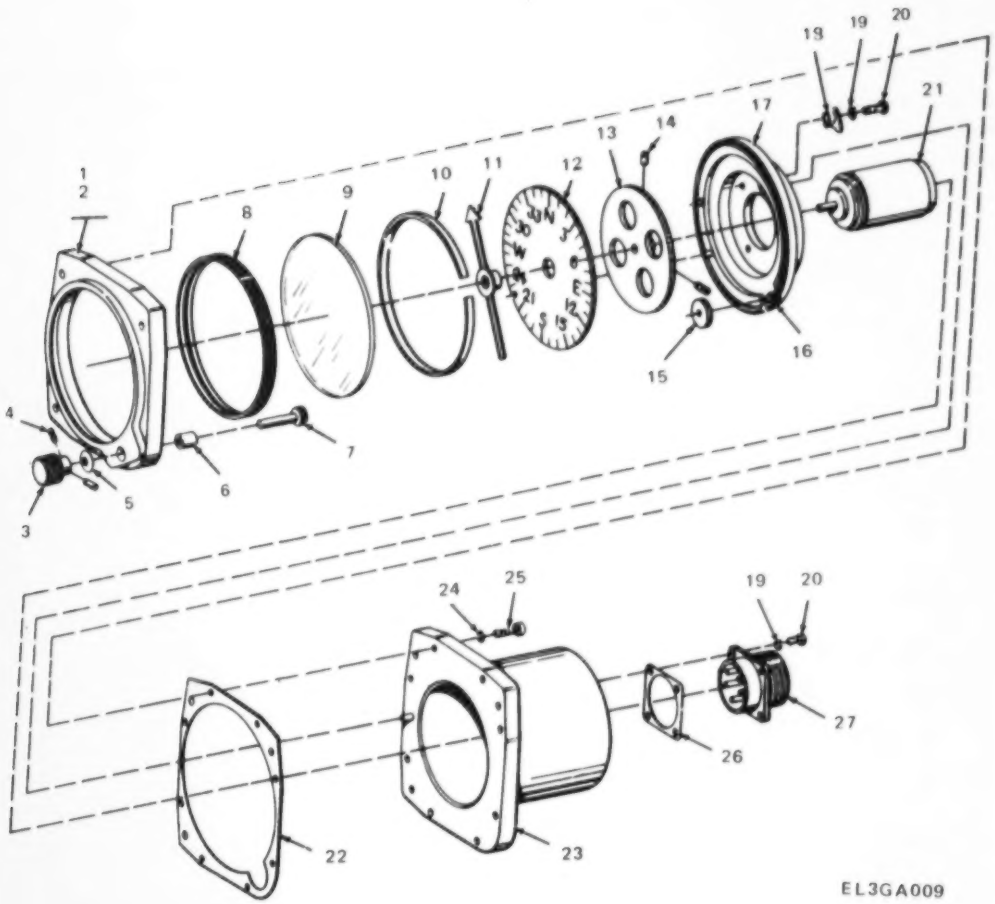

Figure 6. Compass simulator control DS4.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION	(7) U/M	(8) QTY INC IN UNIT
						GROUP 0604 COMPASS SIMULATOR CONTROL G54		
6	1	XEDZZ		100104	24363	COVER,FRONT	EA	1
6	2	XDDZZ		100141	24363	COVER,FRONT SUBASSEMBLY	EA	1
6	3	XDDZZ		100113	24363	KNOB	EA	1
6	4	XDDZZ		100108-2	24363	SETSCREW	EA	4
6	5	XDDZZ		100165	24363	GASKET	EA	1
6	6	XDDZZ		100125	24363	SHAFT,SLEEVE	EA	1
6	7	XDDZZ		100110M	24363	GEAR,DRIVE	EA	1
6	8	XDDZZ		100116	24363	SEAL,WINDOW	EA	1
6	9	XDDZZ		100123	24363	GLASS	EA	1
6	10	XDDZZ		100124M	24363	RETAINER,DIAL	EA	1
6	11	XDDZZ		100126	24363	POINTER	EA	1
6	12	XDDZZ		100118	24363	DIAL	EA	1
6	13	XDDZZ		100107-1	24363	GEAR,SYNCHRO	EA	1
6	14	XDDZZ		100108-1	24363	SETSCREW	EA	2
6	15	XDDZZ		100109-2	24363	GEAR,IDLER	EA	1
6	16	XDDZZ		100144	24363	STANDOFF	EA	3
6	17	XDDZZ		100143-2	24363	HOUSING,SYNCHRO	EA	1
6	18	XDDZZ		100122	24363	CLAMP,SYNCHRO	EA	3
6	19	XDDZZ		210104-4	24363	WASHER,LOCK	EA	10
6	20	XDDZZ		110104-4	24363	SCREW,MACHINE	EA	13
6	21	XDDZZ		100121	24363	SYNCHRO	EA	1
6	22	XDDZZ		100127	24363	GASKET,CASE	EA	1
6	23	XDDZZ		100102T2	24363	HOUSING,REAR	EA	1
6	24	XDDZZ		210103-03	24363	WASHER,LOCK	EA	8
6	25	XDDZZ		110102-3	24363	SCREW,MACHINE	EA	8
6	26	XDDZZ		100106	24363	GASKET,CONN	EA	1
6	27	XDDZZ		100105	24363	CONNECTOR,PLUG	EA	1

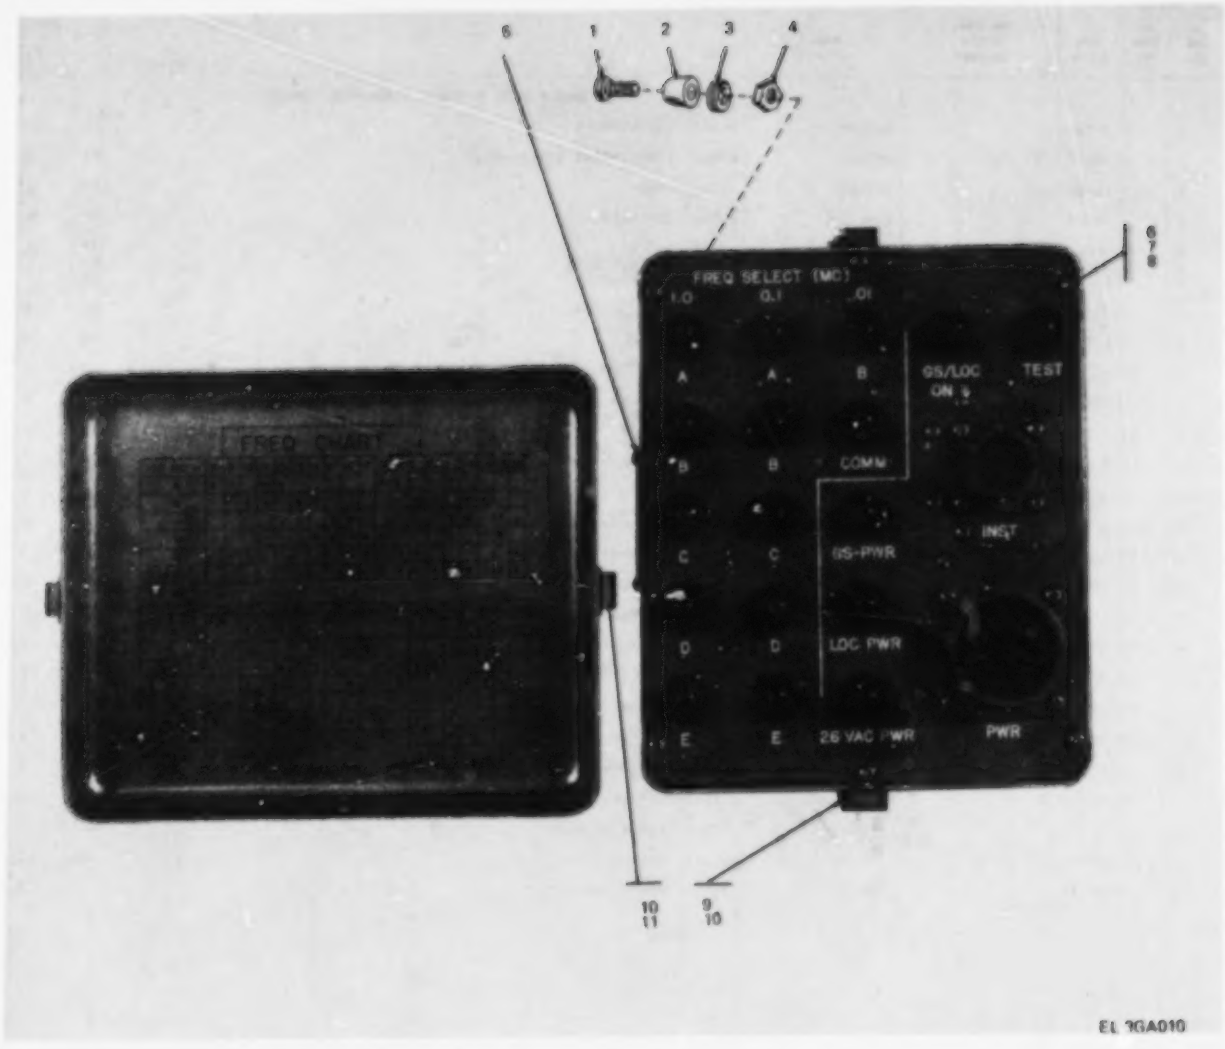

Figure 7. Test set, wiring harness TS-2501/ARM-92.

(1) ILLUSTRATION (a) FIG. NO.	(1) ILLUSTRATION (b) ITEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION (USABLE ON CODE)	(7) U/M	(8) QTY INC IN UNIT
						GROUP 02 REST SET,WIRING HARNESS		
						ES-2501/ARM-92		
7	1	PAMZZ	5305-00-054-6659	MS51957-29	96906	SCREW,MACHINE	EA	4
7	2	PAMZZ	5340-00-264-7102	747RBLACK	95563	BUMPER,RUBBER	EA	4
7	3	PAMZZ	5310-00-616-3555	MS35333-71	96906	WASHER,LOCK	EA	4
7	4	XDMZZ	5310-00-616-8660	P313-0045-000	77250	NUT,PLAIN	EA	4
7	5	PAMZZ	5305-00-054-5635	MS51957-1	96906	SCREW,MACHINE	EA	2
7	6	PAMZZ	5305-00-054-5647	MS51957-13	96906	SCREW,MACHINE	EA	6
7	7	XDMZZ		506-5935-003	13499	WASHER,FLAT	EA	6
7	8	PAMZZ	5310-00-933-8110	MS35338-135	96906	WASHER,LOCK	EA	14
7	9	XDMZZ		VHC340	98003	CATCH,CLAMPING	EA	2
7	10	PAMZZ	5320-00-117-6937	MS20426AD3-3	96906	RIVET,SOLID	EA	8
7	11	PAMZZ	5340-00-021-4713	VHS340	98003	CATCH,LUGGAGE	EA	2

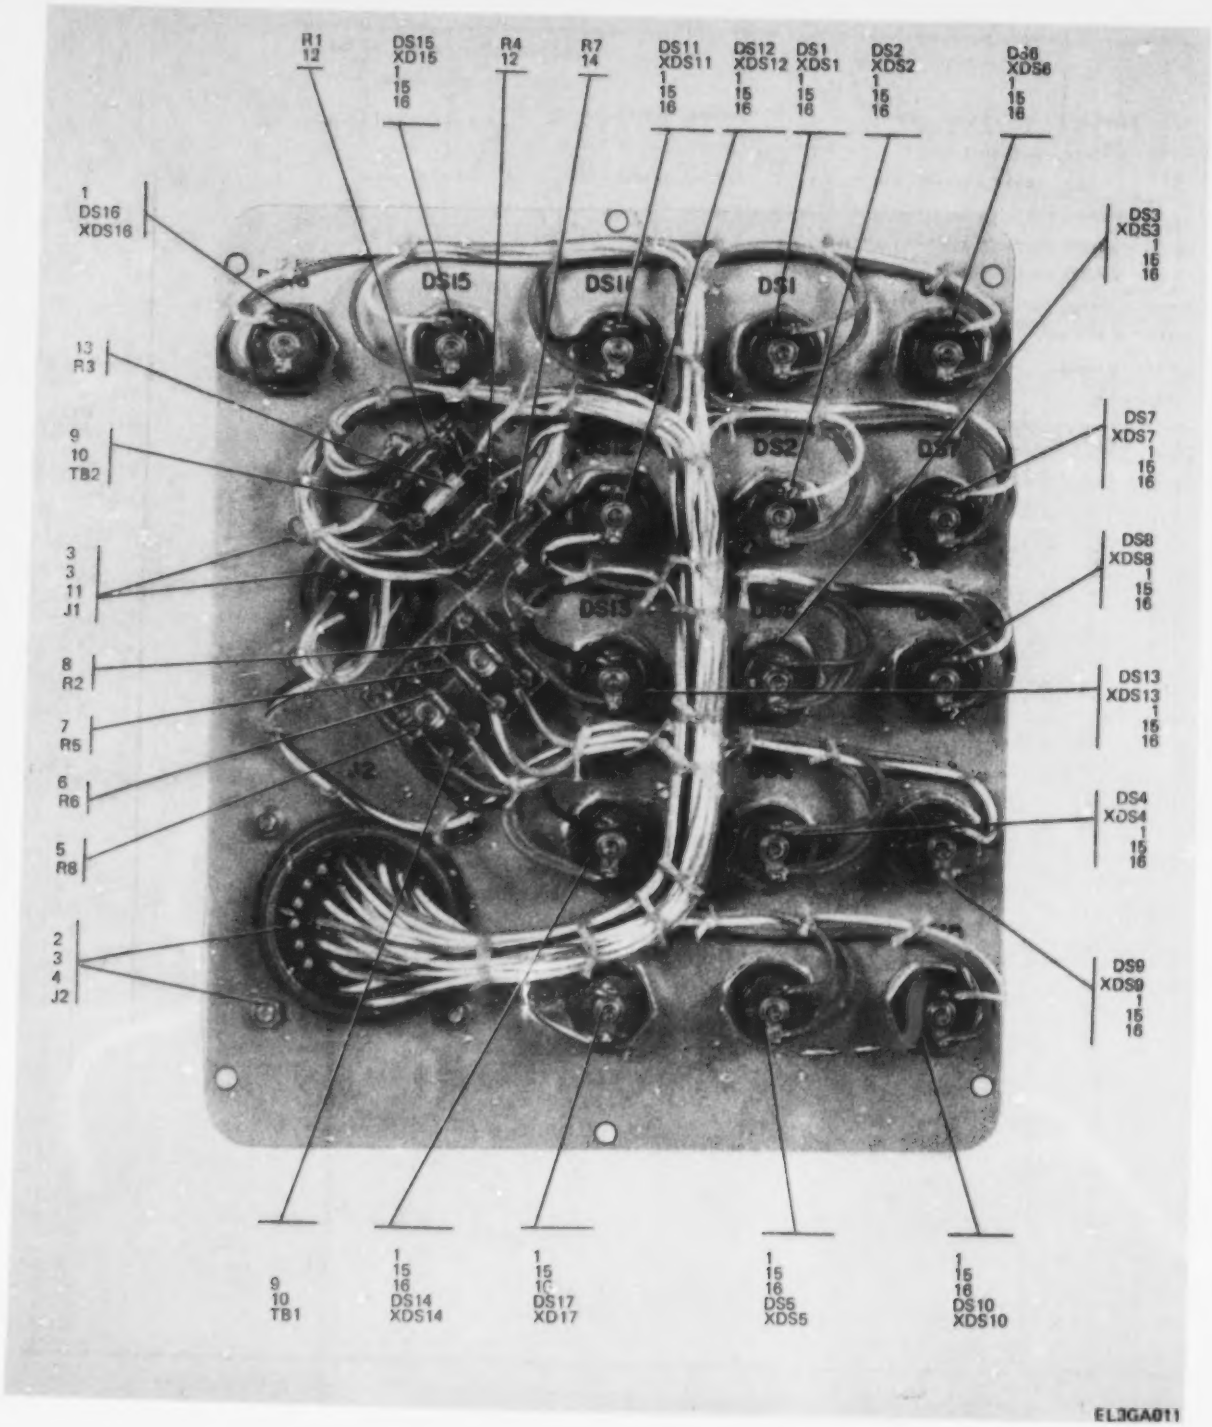

Figure 8. Panel assembly.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP C201 PANEL ASSEMBLY		
8	1	XDHZZ		MILL3661-SLH731	81349	SOCKET,LIGHT	EA	17
8	2	XDHZZ	5935-00-988-3616	BTJ2A20-41P	09922	CONNECTOR,RECEPT	EA	1
8	3	XDHZZ	5310-00-206-3786	P313-0132-000	77250	NUT,PLAIN	EA	6
8	4	PAHZZ	5305-00-054-5648	MS51957-14	96906	SCREW,MACHINE	EA	8
8	5	XDHZZ	5905-00-126-6683	RCR07G332KS	81349	RESISTOR,FIXED	EA	1
8	6	XDHZZ	5905-00-565-9052	RN55D1002F	81349	RESISTOR,FIXED	EA	1
8	7	XDHZZ	5905-00-965-9116	RN5503322F	81349	RESISTOR,FIXED	EA	1
8	8	XDHZZ	5905-00-985-5558	RN55D1962F	81349	RESISTOR,FIXED	EA	1
8	9	XDHZZ	5940-00-204-8298	1180	88245	TERMINAL BOARD	EA	2
8	10	PAHZZ	5305-00-680-6757	P343-0386-000	77250	SCREW,MACHINE	EA	4
8	11	XDHZZ	5935-00-626-1067	PTO2A12-10P	77820	CONNECTOR,RECEPT	EA	1
8	12	XDHZZ	5905-00-988-2317	RN6001001F	81349	RESISTOR,FIXED	EA	2
8	13	XDHZZ	5905-00-965-9116	RN55D5110F	81349	RESISTOR,FIXED	EA	1
8	14	XDHZZ	5905-00-111-4738	RCR20G152KS	81349	RESISTOR,FIXED	EA	1
8	15	PAUZZ	6240-00-155-7836	MS25237-327	96906	LAMP,INCANDESCENT	EA	17
8	16	PAUZZ	6210-00-990-4637	162-0931	72619	LENS,LIGHT	EA	17

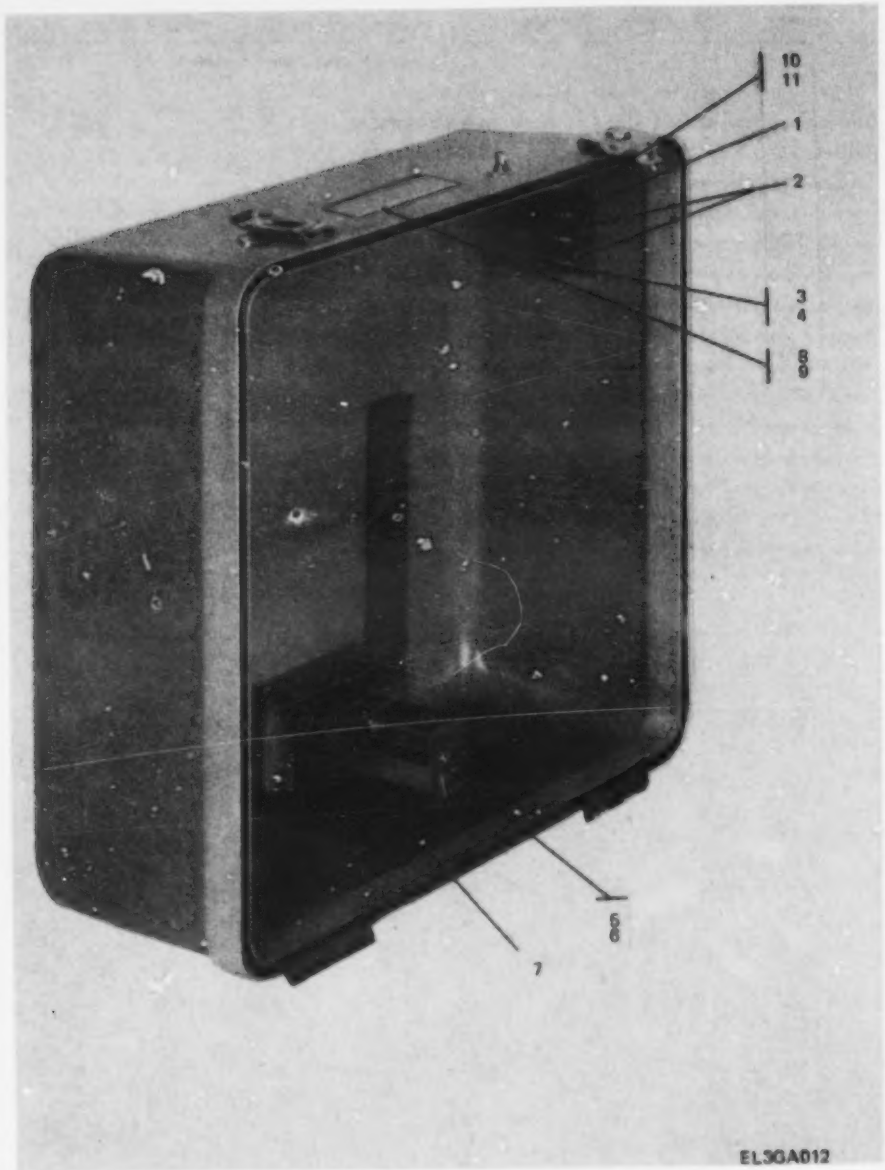

Figure 9. Cover, test set CW-878/ARM-92.

(1) ILLUSTRATION (a) FIG NO	(b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION (USABLE ON CODE)	(7) U/M	(8) QTY INC IN UNIT
						GROUP 03 COVER,TEST SET CW-878/ARM-92		
9	1	PAOZZ	5920-00-280-5062	AGC250-2	71400	FUSE,CARTRIDGE	EA	1
9	2	PAOZZ	5920-00-280-8342	AGC250-1	71400	FUSE,CARTRIDGE	EA	2
9	3	PAHZA	5999-00-191-3175	5682-02	71400	CLIP,ELECTRICAL	EA	6
9	4	PAHZZ	5320-00-117-6948	MS20426AD4-3	96906	RIVET,SOLID	EA	6
9	5	PAHZZ	5340-00-562-6626	30L2-4	71286	HOOK	EA	1
9	6	PAHZZ	5320-00-117-6815	MS20470AD3-4	96906	RIVET,SOLID	EA	4
9	7	PAHZZ	5320-00-117-6937	MS20426AD3-3	96906	RIVET,SOLID	EA	2
9	8	PAHZZ	5310-00-622-1724	68-1660-26	72962	NUT,SELF-LOCKING	EA	2
9	9	PAHZZ	5305-00-054-5637	MS51957-3	96906	SCREW,MACHINE	EA	2
9	10	PAHZZ	5310-00-614-3500	68-1660-40	72962	NUT,SELF-LOCKING	EA	4
9	11	PAHZZ	5305-00-054-5649	MS51957-15	96906	SCREW,MACHINE	EA	4

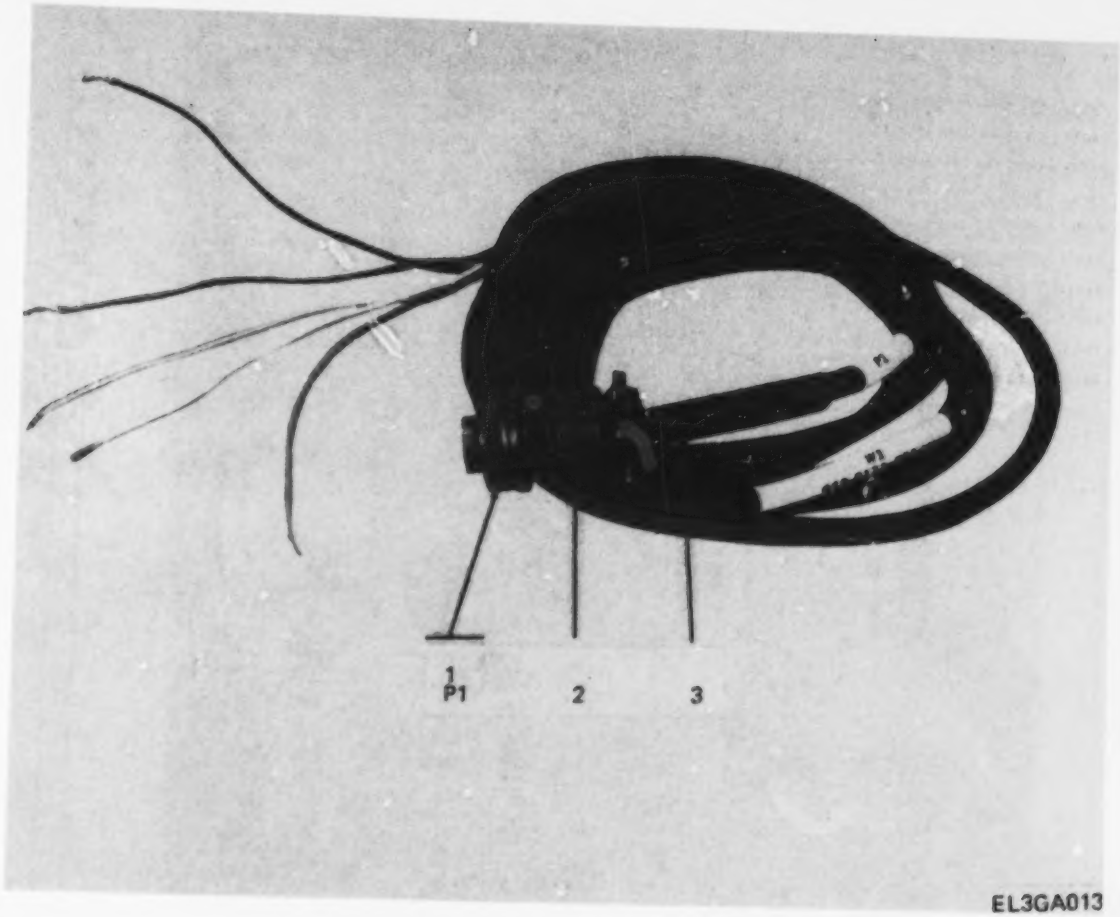

Figure 10. Cable assembly, power CX-11568/ARM-92.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 04 CABLE ASSEMBLY,POWER		
						CX-11568/ARM-92		
10	1	XDHZZ	5935-00-539-2659	MS3106A14S-5S	96906	CONNECTOR,PLUG	EA	1
10	2	PAHZZ	5935-00-280-2195	MS3057-6A	96906	CLAMP,CABLE	EA	1
10	3	PAHZZ	5365-00-820-4535	MS3420-6	96906	BUSHING,RUBBER	EA	1

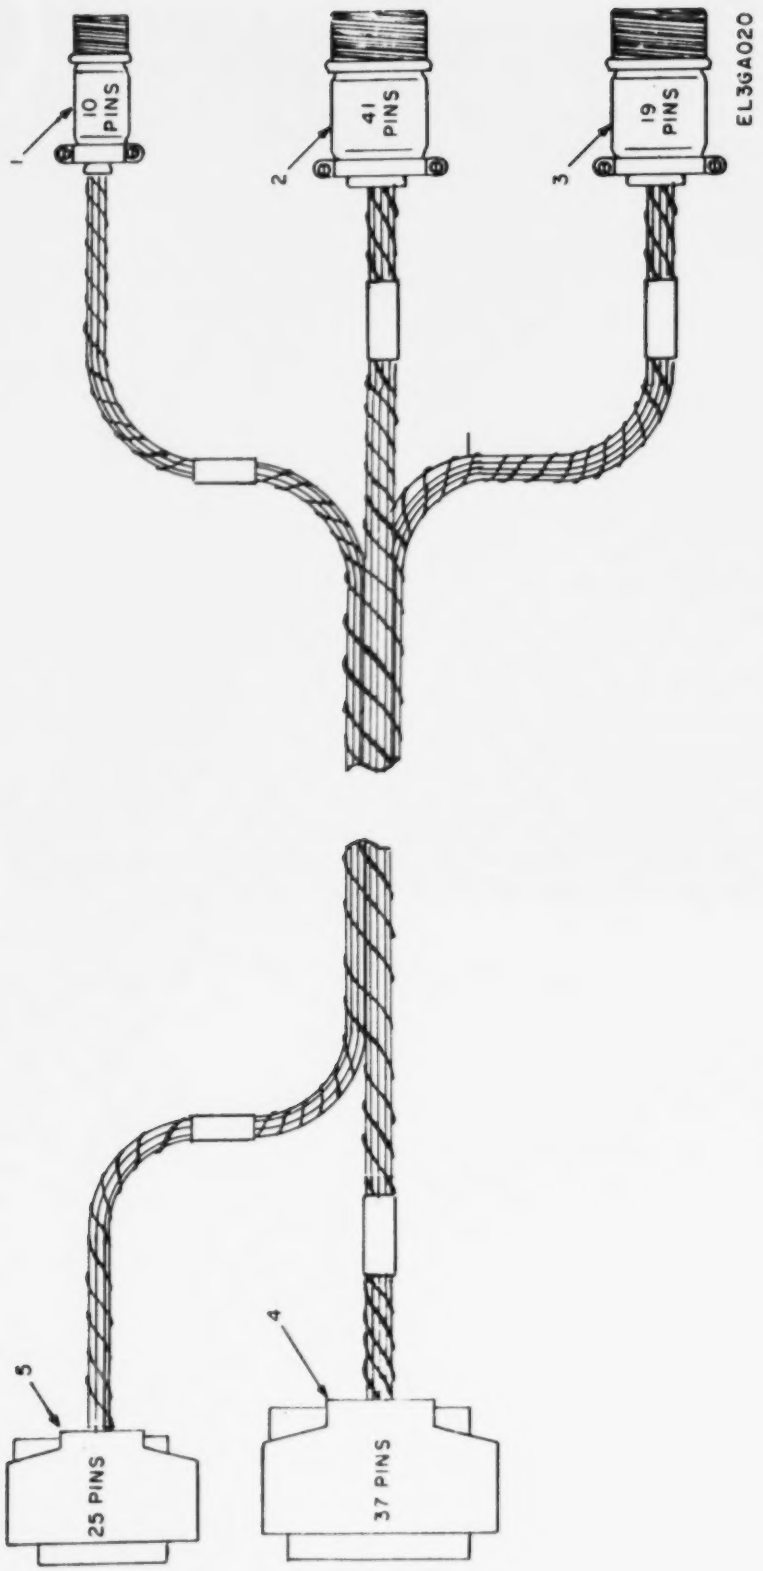

Figure 11. Cable assembly CX-13034.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U M	(8) QTY INC IN UNIT
						GROUP 05 CABLE ASSEMBLY CX-13034		
11	1	XDHZZ		24240-0003	27914	CONNECTOR	EA	1
11	2	XDHZZ		24240-0004	27914	CONNECTOR	EA	1
11	3	XDHZZ		24240-0005	27914	CONNECTOR	EA	1
11	4	XDHZZ		24213-0006	27914	CONNECTOR	EA	1
11	5	XDHZZ		24240-0007	27914	CONNECTOR	EA	1

Figure 12. Cable Assembly CX-13035.

(1) ILLUSTRATION (a) FIG NO	(1) ILLUSTRATION (b) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
						GROUP 06 CABLE ASSEMBLY CX-13035		
12	1	XDHZZ		24213-0004	27914	CONNECTOR	EA	1
12	2	XDHZZ		24240-0007	27914	CONNECTOR	EA	1

NOTE: LATEST NATIONAL STOCK NUMBER AND PART NUMBER ASSIGNMENTS ARE INCLUDED AT END OF INDEX

STOCK NUMBER	FIGURE NO.	ITEM NO.
5340-00-007-6040	4	65
5340-00-021-4713	7	11
5310-00-053-1551	4	45
5305-00-054-5635	2	7
5305-00-054-5635	7	5
5305-00-054-5637	9	9
5305-00-054-5638	1	3
5305-00-054-5647	7	6
5305-00-054-5648	4	46
5305-00-054-5648	8	4
5305-00-054-5649	5	4
5305-00-054-5649	9	11
5305-00-054-6652	4	38
5305-00-054-6653	3	4
5305-00-054-6653	7	1
5305-00-054-6655	4	49
5305-00-054-6656	4	27
5305-00-054-6657	4	31
5930-00-063-6820	4	1
5905-00-069-0897	4	59
5325-00-074-3301	2	6
5905-00-105-7764	4	56
5826-00-106-1722	1	2
5905-00-111-4738	8	14
5320-00-117-6815	9	6
5320-00-117-6937	7	10
5320-00-117-6937	9	7
5320-00-117-6948	9	4
5905-00-126-6683	8	5
5905-00-141-0743	4	53
6240-00-143-6558	4	15
5826-00-149-1399	1	6
6240-00-155-7836	8	15
5325-00-171-4365	3	5
5999-00-191-3175	9	3
5940-00-204-8298	8	9
5310-00-208-3786	8	3
5905-00-221-1312	4	57
5935-00-223-0572	4	24
5930-00-239-3258	4	41
5310-00-261-7717	4	43
5310-00-261-8278	4	51
5310-00-263-8462	4	34
5340-00-264-7182	7	2
5940-00-269-2219	4	4
5310-00-275-1693	3	1
5935-00-280-2195	4	30
5935-00-280-2195	10	2
5920-00-280-5062	4	13
5920-00-280-5062	9	1
5920-00-280-8342	4	11
5920-00-280-8342	9	2
5340-00-336-8164	4	37
5310-00-337-8329	3	8
5940-00-356-2493	4	5
5935-00-415-6070	4	6
5961-00-490-7299	4	54
5945-00-500-7924	5	7
5826-00-505-3094	1	5
5310-00-515-8243	4	36
5310-00-531-9514	3	3
5935-00-539-2659	4	29
5935-00-539-2659	10	1
5310-00-543-2740	4	18
5935-00-552-2374	4	23
6210-00-560-1558	4	16
5340-00-562-6626	9	5
5320-00-584-0672	3	6
5365-00-598-5282	4	25
5310-00-614-3500	9	10
5940-00-615-8958	4	7
5310-00-616-3555	7	3
5310-00-616-8660	7	4
5310-00-622-1724	1	4
5310-00-622-1724	9	8
5940-00-665-5592	4	22
5355-00-680-1357	4	2
5305-00-680-6757	8	10
5905-00-681-1197	5	1
5975-00-727-5153	4	50
5305-00-727-8832	4	48
5935-00-729-8688	4	33
5961-00-732-5028	4	55
5940-00-738-1265	4	67
5950-00-738-9448	5	8
6240-00-763-7744	4	8
5305-00-768-0336	5	11
5305-00-770-2533	5	5
6210-00-780-7944	4	21
5935-00-813-5874	4	14
5365-00-820-4535	2	1
5365-00-820-4535	10	3
5935-00-826-1007	8	11
6625-00-842-9720	1	8
5310-00-857-5548	4	28
5920-00-864-6622	4	12
5935-00-866-2255	2	4
5310-00-866-3506	5	10
5935-00-901-8874	4	32
5950-00-903-4357	5	6
5355-00-909-0465	4	3
5310-00-933-8118	4	47
5310-00-933-8118	7	8
5935-00-936-7376	4	26
5935-00-936-7376	4	35
5935-00-936-7377	2	5
5940-00-950-5761	4	52
5905-00-952-7223	4	63
5905-00-965-5558	8	8
5905-00-965-5561	4	61
5999-00-965-5571	4	64
5905-00-965-9052	8	6
5905-00-965-9116	8	7
5905-00-965-9118	8	13
6625-00-966-1932	1	1
6625-00-966-1933	1	7
5905-00-988-2313	4	60
5905-00-988-2317	8	12
5935-00-988-3616	8	2
6210-00-990-4637	4	9
6210-00-990-4637	8	16

PART NUMBER	FSCM	FIG. NO.	ITEM NO.
AGC250-1	71400	4	11
AGC250-1	71400	9	2
AGC250-2	71400	4	13
AGC250-2	71400	9	1
BK43369	11236	4	42
BT02A20-41P	09922	8	2
BT06AC14-19S	09922	2	3
C6873BARN82	80058	1	6
DF30BC	58474	4	4
DF30RC	58474	4	5
F12NCFMA2-62	72962	5	10
F12NC4284-2-62	72962	3	1
HKPH	71400	4	12
HP10N	09922	4	37
HP4N	09922	4	35
HP5N	09922	4	65
HS480	80223	5	6
ID1347CARN82	80058	1	2
ID250AARN	80058	1	5
MILL3661-5LH731	81349	8	1
MS20426AD3-3	96906	7	10
MS20426AD3-3	96906	9	7
MS20426AD3-6	96906	3	6
MS20426AD4-3	96906	9	4
MS20470AD3-4	96906	9	6
MS21266-2N	96906	2	6
MS25237-327	96906	8	15
MS25237-387	96906	4	8

PART NUMBER	FSCM	FIG. NO.	ITEM NO.
MS3057-12A	96906	4	24
MS3057-6A	96906	4	30
MS3057-6A	96906	10	2
MS3102A14S5P	96906	5	3
MS3106A14S5S	96906	4	29
MS3106A14S5S	96906	10	1
MS3106A22-14S	96906	4	23
MS3338-6839	96906	4	15
MS3367-4-9	96906	4	50
MS3420-10	96906	4	26
MS3420-4	96906	4	25
MS3420-6	96906	2	1
MS3420-6	96906	10	3
MS3420-8	96906	2	5
MS35333-71	96906	7	3
MS35333-74	96906	4	18
MS35338-100	96906	4	51
MS35338-135	96906	4	47
MS35338-135	96906	7	8
MS51957-1	96906	2	7
MS51957-1	96906	7	5
MS51957-13	96906	7	6
MS51957-14	96906	4	46
MS51957-14	96906	8	4
MS51957-15	96906	5	4
MS51957-15	96906	9	11
MS51957-28	96906	4	38
MS51957-29	96906	3	4
MS51957-29	96906	7	1
MS51957-3	96906	9	9
MS51957-31	96906	4	49
MS51957-32	96906	4	27
MS51957-33	96906	4	31
MS51957-4	96906	1	3
MS51959-13	96906	5	5
MS51959-17	96906	5	11
MS51959-29	96906	4	48
MS91528-1F28	96906	4	2
MILL3661-5LH731	81349	4	10
M39024-10-06	81349	4	14
PT01E20-41PWSR	77820	2	2
PT02A12-10P	77820	8	11
PT06A12-10SSR	77820	4	33
PT06A20-41SSR	77820	2	4
PT06A20-41SWSR	77820	4	32
P313-0045-000	77250	7	4
P313-0062-000	77250	5	2
P313-0064-000	77250	4	34
P313-0132-000	77250	8	3
P343-0386-000	77250	8	10
RA20LAS8102A	81349	5	1
RCR07G222JS	81349	4	56
RCR07G223KS	81349	4	57
RCR07G332KS	81349	8	5
RCR07G392KS	81349	4	53
RCR20G152KS	81349	8	14
RN55D1002F	81349	8	6
RN55D1102F	81349	4	61
RN55D1782F	81349	4	63
RN55D1962F	81349	8	8
RN55D20008	81349	4	58
RN55D27118	81349	4	62
RN55D3322F	81349	8	7
RN55D5110F	81349	8	13
RN60D1001F	81349	8	12
RN60D1211F	81349	4	60
RN60D3740F	81349	4	59
SL354-351WHT	12615	4	52
VHC340	98003	7	9
VHS340	98003	7	11
YE1620F29	09922	4	64
1N645	15238	4	66
10010272	24363	6	23
100104	24363	6	1
100105	24363	6	27
100106	24363	6	26
100107-1	24363	6	13
100108-1	24363	6	14
100108-2	24363	6	4
100109-2	24363	6	15
100110M	24363	6	7
100113	24363	6	3
100116	24363	6	8
100118	24363	6	12
100121	24363	6	21
100122	24363	6	18
100123	24363	6	9
100124M	24363	6	10
100126	24363	6	11
100127	24363	6	22
100141	24363	6	2
100143-2	24363	6	17
100144	24363	6	16
100145	24363	6	5
102SR1H23H1	08717	4	16
102264AL	08717	4	21
102264BL	08717	4	19
102264RL	08717	4	17
102264WL	08717	4	20
110102-3	24363	6	25
110104-4	24363	6	20
1180	88245	8	9
119-0507-000009	98291	4	55
162-0931	72619	4	9
162-0931	72619	8	16
1720-02	78189	4	43
2N2222A	07263	4	54
210103-03	24363	6	24
210104-4	24363	6	19
2104-06-02-2520N	78189	4	7
212-12N	71286	3	5
24213-0004	27914	11	4
24213-0004	27914	12	1
24240-0003	27914	11	1
24240-0005	27914	11	3
24240-0007	27914	11	5
24240-0007	27914	12	2
24240-0009	27914	11	2
2651387	71286	3	9
2600LW	71286	3	8
3UL2-4	71286	9	5
310-0046-000	79807	4	36
310-0447-000	79807	5	9
310-6360-000	79807	3	3
36747	73386	5	8
4-03649-0210	70674	4	6
4012MT	77147	4	22
42D36-06-1AJN	81073	4	44
44A30-02-4-2N	81073	4	41
44A30-03-4-2N	81073	4	39
44D30-08-1AJN	81073	4	40
506-5935-003	13499	7	7
540-9041-003	13499	4	45
5407-6MS	82415	5	7
547-5305-002	13499	4	67
5682-02	71400	9	3
618-4921-027	13499	4	54
629-0182-001	13499	3	7
68-1660-26	72962	1	4
68-1660-26	72962	9	8
68-1660-40	72962	9	10
68NM40	72962	4	28
68NM62	72962	3	2
7201SYZQ	09353	4	1
7213	55026	1	8
747RBLACK	75543	7	2
757-0228-001	13499	4	3
8185	55026	1	7
8186	55026	1	1

LATEST NATIONAL STOCK NUMBER ASSIGNMENTS

STOCK NUMBER	FIGURE NO.	ITEM NO.
5340-00-003-9207	4	35
5935-00-866-2255	4	68
5935-00-936-7377	4	69

LATEST PART NUMBER ASSIGNMENTS

PART NUMBER	FSCM	FIG. NO.	ITEM NO.
MS3420-8	96906	4	69
PT06A20-41SSR	77820	4	68
100125	24363	6	6

TM 11-6625-2709-4 P

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

SOMETHING WRONG WITH THIS MANUAL?

THEN. . .JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)
Commander
Stateside Army Depot
ATTN: AMSTA-US
Stateside, N.J. 07703

DATE 10 July 1975

PUBLICATION NUMBER	DATE	TITLE
TM 11-5840-340-12	23 Jan 74	Radar Set AN/[illegible]-76

BE EXACT. . .PIN-POINT WHERE IT IS

PAGE NO.	PARAGRAPH	FIGURE NO.	TABLE NO.	IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:
2-25	2-28			Recommend that the installation antenna alignment procedure be changed throughout to specify a 2° IFF antenna lag rather than 1°. REASON: Experience has shown that with only a 1° lag, the antenna servo system is too sensitive to wind gusting in excess of [illegible] knots, and has a tendency to rapidly accelerate and decelerate as it hunts, causing strain to the drive train. Hunting is minimized by adjusting the lag to 2° without degradation of operation.
3-10	3-3		3-1	Item 5, Function column. Change "2 db" to "3db." REASON: The adjustment procedure for the TRANS POWER FAULT indicator calls for a 3 db (500 watts) adjustment to light the TRANS POWER FAULT indicator.
5-6	5-8			Add new step f.1 to read, "Replace cover plate removed in step e.1, above." REASON: To replace the cover plate.
		FO3		Zone C 3. On J1-2, change "+24 VDC to "+5 VDC." REASON: This is the output line of the 5 VDC power supply. + 24 VDC is the input voltage.

SAMPLE

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER
SSG I. M. DeSpiritof 999-1776

SIGN HERE: SSG I. M. DeSpiritof

DA FORM 1 AUG 74 2028-2 (TEST)

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

HISA 1686-75

TEAR ALONG DOTTED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

SOMETHING WRONG WITH THIS MANUAL?

THEN. . .JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

DATE

PUBLICATION NUMBER	DATE	TITLE
TM 11-6625-2709-40P	17 Apr 78	

BE EXACT. . .PIN-POINT WHERE IT IS

PAGE NO.	PARAGRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 1 AUG 74 2028-2 (TEST)

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG DOTTED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

PENALTY FOR PRIVATE USE, $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD-314

U.S.MAIL

Commander
US Army Communications and Electronics
Materiel Readiness Command
ATTN: DRSEL-MA-Q
Fort Monmouth, NJ 07703

TEAR ALONG DOTTED LINE

FOLD BACK

REVERSE OF DA FORM 2028-2 (TEST)

TM 11-66 25-2709-40p

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

SOMETHING WRONG WITH THIS MANUAL?

THEN. . .JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

DATE

PUBLICATION NUMBER	DATE	TITLE
TM 11-6625-2709-40P	17 Apr 78	

BE EXACT. . .PIN-POINT WHERE IT IS

PAGE NO.	PARAGRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 1 AUG 74 2028-2 (TEST)

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG DOTTED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

PENALTY FOR PRIVATE USE, $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD-314

U.S.MAIL

Commander
US Army Communications and Electronics
Materiel Readiness Command
ATTN: DRSEL-MA-Q
Fort Monmouth, NJ 07703

TEAR ALONG DOTTED LINE

FOLD BACK

REVERSE OF DA FORM 2028-2 (TEST)

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

SOMETHING WRONG WITH THIS MANUAL?

THEN. . .JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

DATE

PUBLICATION NUMBER	DATE	TITLE
TM 11-6625-2 709-40P	17 Apr 78	

BE EXACT. . .PIN-POINT WHERE IT IS

PAGE NO.	PARAGRAPH	FIGURE NO.	TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 1 AUG 74 2028-2 (TEST)

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG DOTTED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

PENALTY FOR PRIVATE USE, $300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD-314

U.S.MAIL

Commander
US Army Communications and Electronics
Materiel Readiness Command
ATTN: DRCEL-MA-Q
Fort Monmouth, NJ 07703

TEAR ALONG DOTTED LINE

FOLD BACK

REVERSE OF DA FORM 2028-2 (TEST)

By Order of the Secretary of the Army:

BERNARD W. ROGERS
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Brigadier General, United States Army
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-36A, Direct and General Support maintenance requirements for AN/ARM-92.

☆U.S. GOVERNMENT PRINTING OFFICE : 0 - 1990 262-912 (30441)